65MM ROSE ADAPTER KIT

INSTALLATION INSTRUCTIONS

FOR INSTALLATION INTO DOORS WITH EXISTING 54 MM PRE-DRILLED CROSS BORE

IMPORTANT INFORMATION

The system requires:


- Lo & Co Lever Set with 55mm rose (not compatible with all models - refer to compatibility guide)
- 65mm Rose Adaptor Kit (for retrofit installation into 54mm pre-drilled doors)

The adaptor kit allows Lo & Co lever hardware to be installed into an existing 54mm cross bore using adaptor plates and 65mm roses.

STEP 1 - INSTALLING THE LATCH

1.1. Position the latch faceplate on the door edge and mark its outline.
- Chisel out a recess to ensure the faceplate sits flush. Y
- Ensure depth matches faceplate thickness.
- Minor adjustment of the existing recess may be required to suit the new latch.

1.2. Insert the latch into the edge bore and secure it with the provided screws.

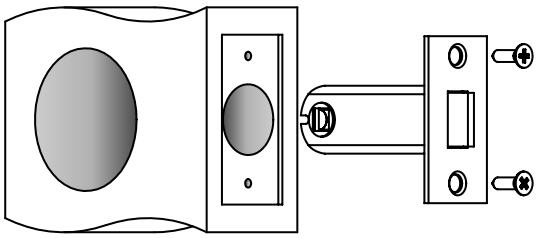

STEP 2 - PREPARE LEVER ASSEMBLIES (ADAPTOR KIT INTEGRATION)

2.1. Remove the 55mm roses covers from the lever assemblies.
- These are not used in retrofit installation and may be discarded.

2.2. Remove the 65mm roses from the adaptor plates.
- The adaptor plates are supplied pre-assembled with the 65mm roses for protection.
- Roses must be removed for installation and reattached at the final stage.


2.3. On the outward side lever assembly:
- Secure the adaptor plate to the fitting plate by attaching the two screw extensions with the 15mm flat-end screws.
- Insert the split spindle (spring end first) into the lever assembly.

2.4. Position the outward lever assembly onto the door and engage spindle into the latch.

2.5. On the inward side lever assembly:
- Align the adaptor plate with the fitting plate and loosely Insert the two 25mm screws to hold the assembly together.
- Insert the split spindle (spring end first).
- Bring both sides together by tightening the 25mm screws into the screw extension system.

2.6. Tighten all fixings once both assemblies are aligned.

2.7. Test lever operation to confirm smooth movement and latch engagement.

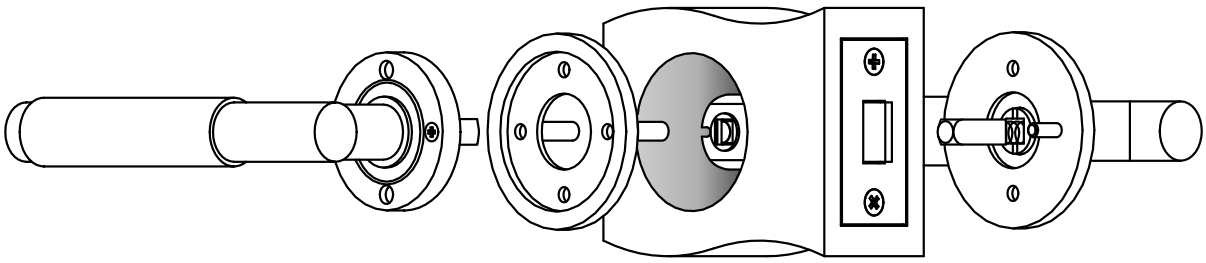

NOTES

We recommend engaging a professional installer to fit your hardware for optimal results.


65MM ROSE ADAPTER KIT

INSTALLATION INSTRUCTIONS

FOR INSTALLATION INTO DOORS WITH EXISTING 54 MM PRE-DRILLED CROSS BORE

STEP 3 - INSTALL 65MM ROSES

3.1. Screw the 65mm roses onto each lever assembly and tighten by hand only.

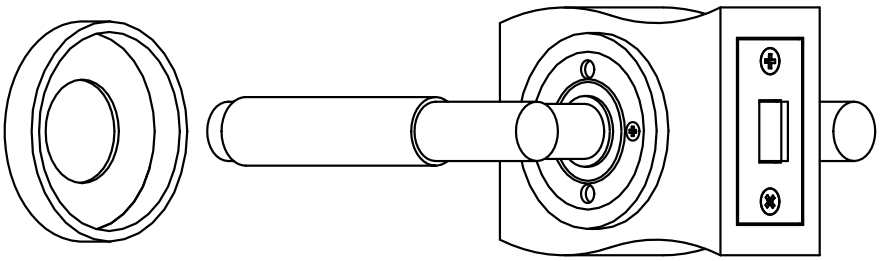

NOTES

We recommend engaging a professional installer to fit your hardware for optimal results.