




Component: 1 Pair Lever Set



- 15-Year Warranty: Futura Door Furniture is covered for 15 years internally and 10 years externally. If defective, Zanda will replace it for free.
- Ergonomic design for user comfort
- Modern European design
- Ideal for elderly
- Disabled compliant
- Backsets are 60mm. Specify if otherwise.
- Suit domestic and light commercial application
- Suits 25mm hole size

- Lever Set
- Passage Set
- Separate Privacy Set
- Integrated Privacy Set
- Dummy Set
- Entrance Set

- Brushed Nickel
- Graphite Nickel
- Matt Black
- Satin Brass
- White

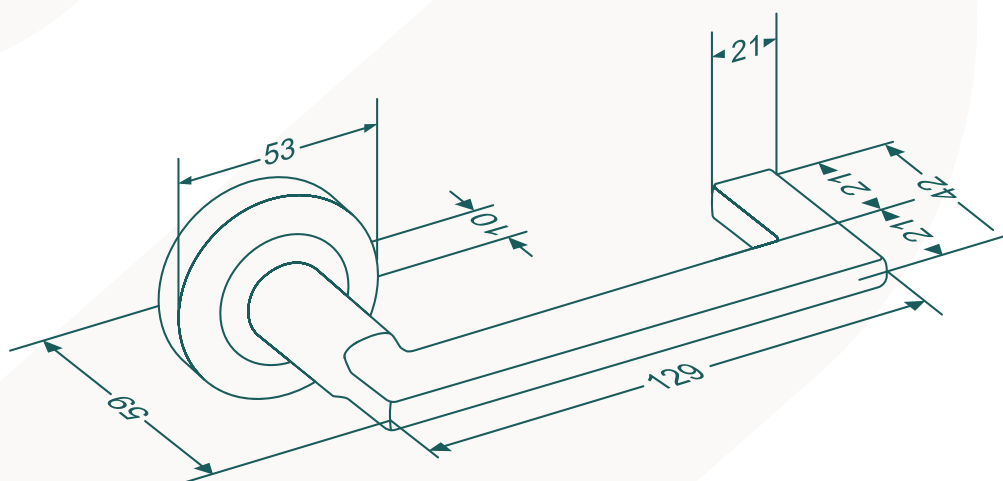

1 300 926 321

sales@zanda.com.au

www.zanda.com.au 


FUTURA LEVER SETS

Product Code: 10010 | 10020 | 10070


10080 | 10090 | 7015 | 7019 | 7106 | 7313 | 10000 | 10050

Print: Actual size on A4 paper


Futura Lever Sets are typically used on double doors without a latch. If used with a mortice lock refer to mortice lock instructions

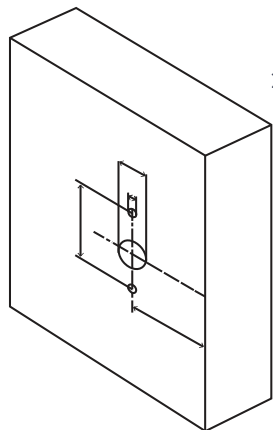

- 1 Establish the height and position for the handle on the door.
- 2 Mark the face of the door each side for drilling a 25mm diameter spindle hole. Match the backset measurement of the passage doors throughout your home. Mark and drill two 6mm screw holes at 21mm above and below the center of the spindle hole. For clean cut-outs, drill from both sides, meeting in the middle of the door.

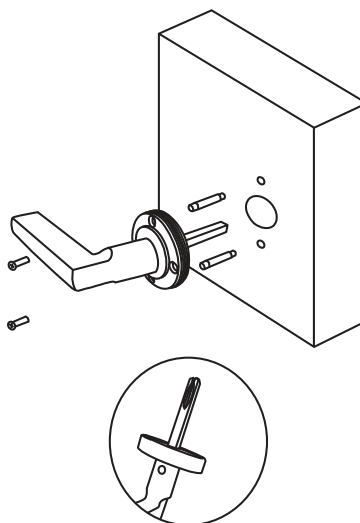

- 3 Unscrew the rose covers from the levers and unscrew the bolts from the threaded sleeves.
- 4 Insert the spindle into the handle. Ensure the grooved side of the spindle will align with the grubscrews on the handles.
- 5 Insert the threaded sleeves into the oval holes in the back of the rose at two vertical positions. Screw the short bolts from the top of the rose through into the threaded sleeves.
- 6 Insert the handle into the hole and press against the door.

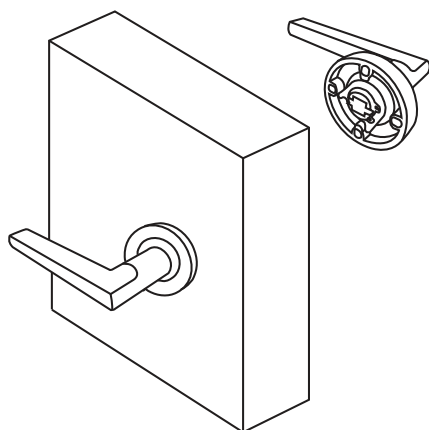

- 7 Insert the handle on the opposite side of the door over the spindle and tighten the long bolts through the rose into the threaded sleeves.
- 8 Screw the rose covers onto the handles and tighten the grubscrews on the side of the levers onto the spindle for each side of the door.

Note: The grubscrews may need a re-tighten after a bedding in period. We recommend medium strength thread lock to be used.